

RV ALARM SYSTEM Schematic

* 16-Gauge Wire Is Recommended

OPERATING INSTRUCTIONS

- Make sure the entry, 2nd, and ramp door are shut (this puts the magnets together). You will not be able to turn the alarm on if one of these are open. It will chirp 5 times if one of these are open!
- Turn the alarm on with the manual wall switch.
- You then have 30 seconds to exit the unit. After 30 seconds the siren will chirp once to let you know the alarm is now on.
- When the alarm is on the "Lighted Indicator" will flash.
- Once the alarm is on, if you open the entry door you have 30 seconds to disarm with the wall switch or the siren will sound..
- If you open the 2nd door or ramp door the siren will instantly sound.

AS-ALM-H1 (INCLUDED IN KIT)


- (1) RV Alarm Control Module
- (1) Single Momentary Switch & Printed Bezel
- (1) Lighted Indicator & Printed Bezel
- (1) Pigtail (Wire) Set
- (1) 12V Alarm Siren
- (3) 1A Magnet Switch, Normally Open
- (2) Alta Alarm Shield (Exterior Sticker)
- (1) Remote Receiver Module
- (1) Remote Transmitter/Key Fob w/Logo



ALARM SHIELD
(EXTERIOR STICKER)



KEY FOB

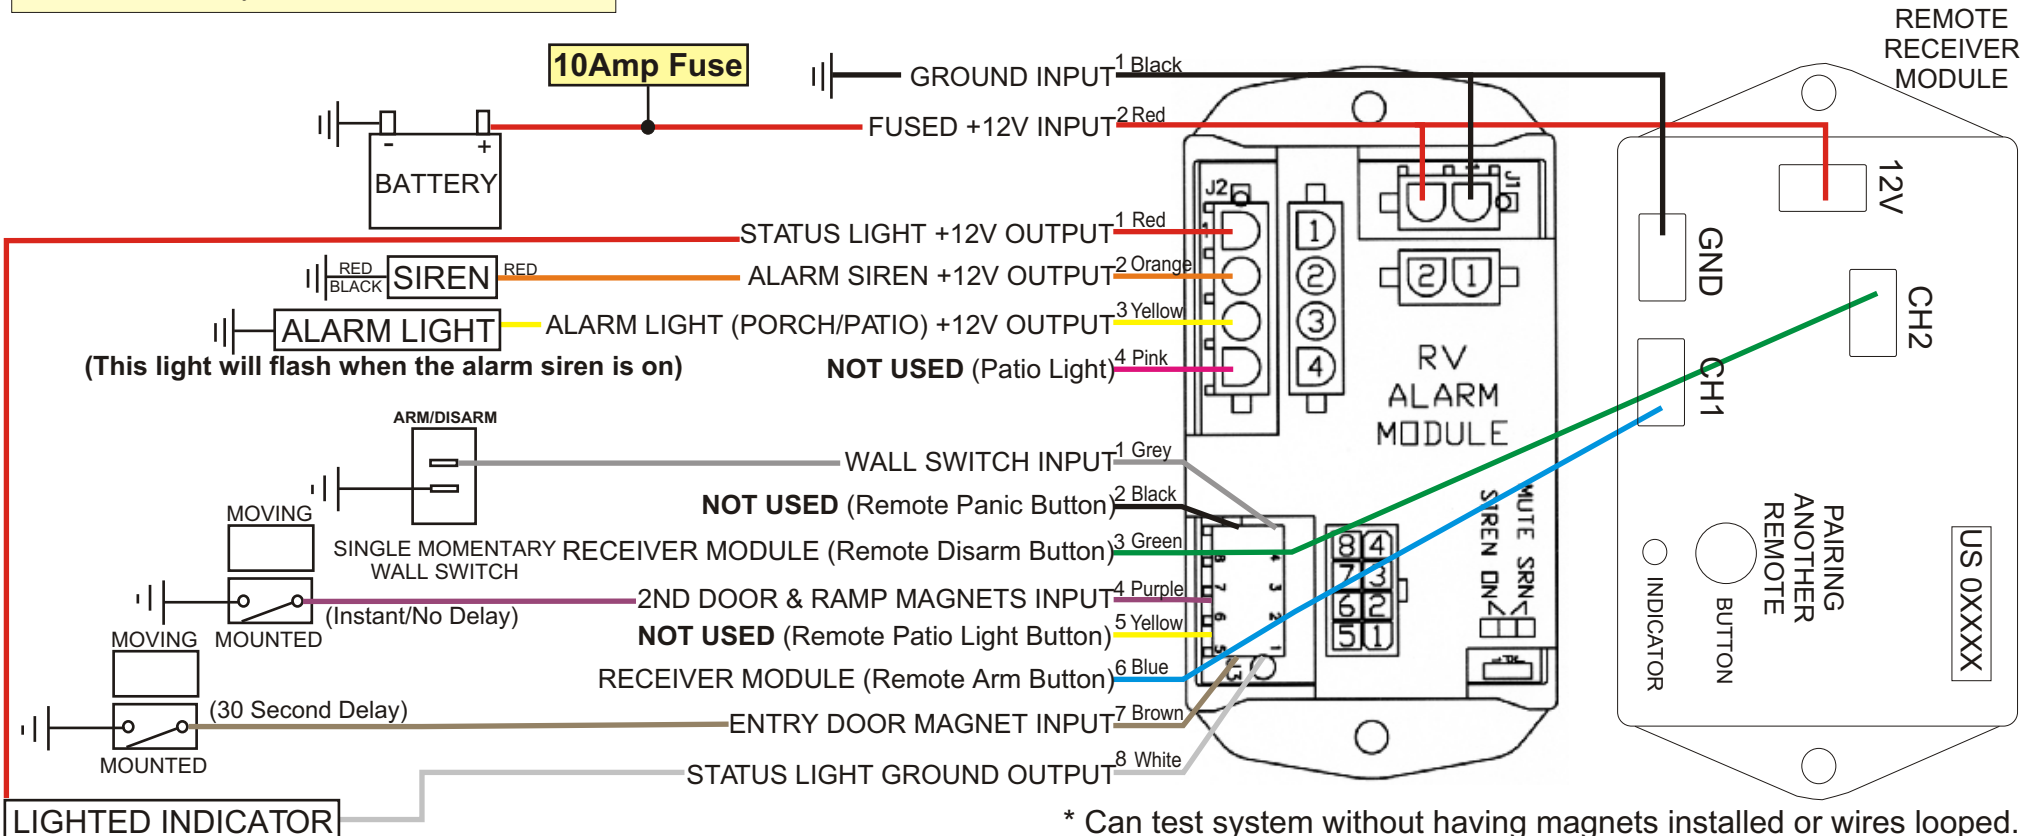

* Can test system without having magnets installed or wires looped.