



# Wireless Remote Control Quick Start Guide (Service Calls)

2905 LaVanture Place - Elkhart, IN 46514 - T(574) 262-1258 - F(574) 264-9138

BY AMERICAN TECHNOLOGY COMPONENTS

- Turn the on / off switch to the on position, to activate. This switch should be in the off position when the unit is not in use.
- On the key fob, depress and hold a button to operate the motor in one direction (ex. Slide Room Out). Then by releasing the button and depressing the same one again, the motor will reverse directions (ex. Slide Room In).
  - Please note that there is an automatic reset breaker inside the receiver box. When the breaker trips the remote system loses directional memory and often tries to move the motor in the direction it was previously traveling.
  - For example, if you move the slide room all the way out and the breaker trips and you depress the button again the room might want to continue to travel in the out position. This could also occur while coming in.
  - What to do: After the breaker has tripped “bump” the button on the remote control or wall switch by holding it down for a short period of time (fractions of a second). Remember to be quick so the breaker doesn’t trip again! Then depress the button again and the motor should move in the opposite direction.
  - Another thing that can help this issue is when the application (slide room, landing leg, awning, or leveling jack) is all the way out or in to release the button before the breaker trips.
- Please remember the manual wall switch might function the same as the key fob button.
- If you have a remote with numbers on the buttons: By depressing buttons 3&4 at the same time you will turn on/off the porch light. Also, by depressing buttons 1&2 at the same time you can lock-out/turn-on buttons 1-4 on the key fob.
- Care should be taken not to overdrive the application. When the application reaches the end of travel, release the button/switch.
- In the event the application would need to be manually cranked, it may be necessary to unplug the motor wires from the receiver box. This is because, some motors will create excessive drag in the system when manually cranked and by unplugging the motor wires it will make it easier to operate.
- Most key fobs are “learning remotes”. In the event you would need another one, please contact Alta Resources.

### To program the learning remote:

- A) Open the Receiver Box by removing the 4 phillips screws from the corners of the lid.
- B) Press and hold the program button on the receiver board (inside the box) until the red LED starts flashing
- C) Release program button
- D) Press and hold any button (1-4) on the remote / transmitter
- E) The LED on the receiver will stop flashing and stay on
- F) Release the button on the remote (if you have an additional remote to be learned do it now)
- G) LED on receiver board will start flashing again
- H) Wait for approximately 10 second and the LED will turn off indicating you have exited the program mode
- I) Enjoy the convenience of having an Alta Remote Control System!!

\* If you have any questions, feel free to contact American Technology at (574) 262-1258