



2905 LaVanture Place - Elkhart, IN 46514 - T(574) 262-1258 - F(574) 264-9138

BY AMERICAN TECHNOLOGY COMPONENTS



Key Fob




Turn key fob over




Take out screw



Open key fob

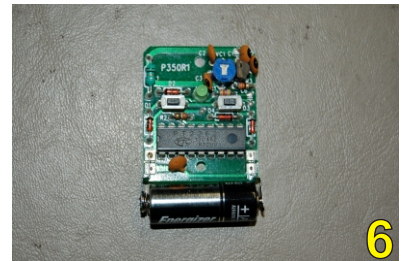

Take out board

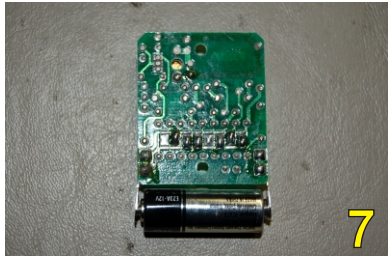

Flip over



Receiver Box




Unscrew the lid




Be careful when removing the board



Plug in the soldering iron

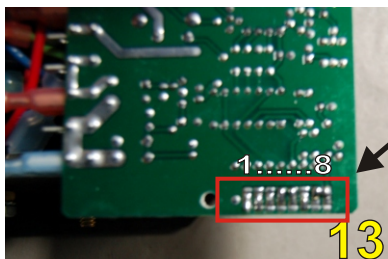

Flip the board over

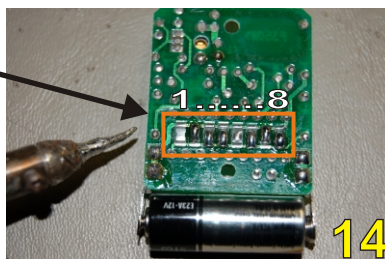

The key fob needs to be coded from 1 to 8 exactly like the receiver board.

