


MANUAL WALL SWITCH

MOTOR



- Depress Buttons 1&2 to lockout the key fob

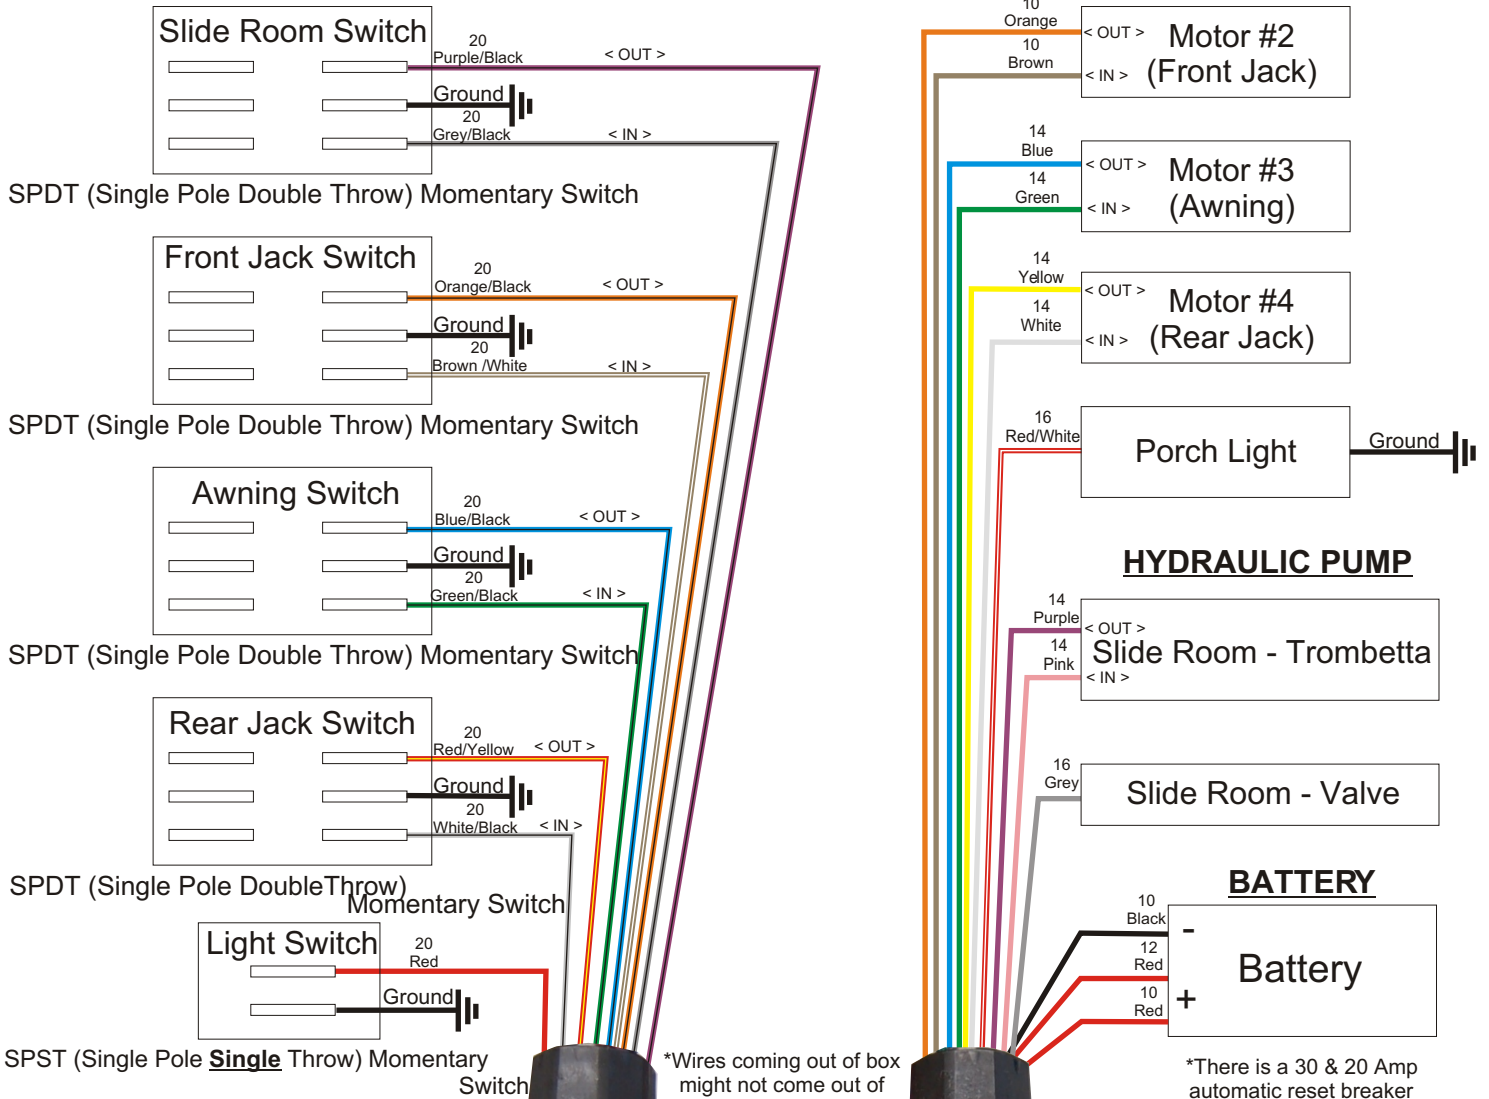

- Depress Buttons 3&4 to operate the Porch Light

AS-4003
ON/OFF Switch Above

WIRE FUNCTIONS BY COLOR:

<ul style="list-style-type: none"> 10 Gauge Red - 30A Battery Power* 10 Gauge Black - Main Ground 12 Gauge Red - 20A Battery Power* 14 Gauge Purple & Pink - Hydraulic Trombetta or 12volt Electric Motor #1 10 Gauge Orange & Brown - 12volt Electric Motor #2 14 Gauge Blue & Green - 12volt Electric Motor #3 14 Gauge Yellow & White - 12volt Electric Motor #4 16 Gauge Grey - Hydraulic Valve or NOT USED for Electric Motor #1 16 Gauge Red/White - Porch/Patio Light 20 Gauge Red/Black - Ignition Sense 	<ul style="list-style-type: none"> 20 Gauge Purple/Black & Gray/Black - Hyd/Motor #1 20 Gauge Orange/Black & Brown/White - Motor #2 20 Gauge Blue/Black & Green/Black - Motor #3 20 Gauge Red/Yellow & White/Black - Motor #4
--	---

Single Pole Single Throw (SPST) Momentary Switch

- 20 Gauge Pink - Hydraulic/Motor #1
- 20 Gauge Brown - Motor #2
- 20 Gauge Blue - Motor #3
- 20 Gauge Yellow - Motor #4
- 20 Gauge Red - Porch/Patio Light

KEY FOB OPERATION:

- Button 1 - 12volt Hyd/Electric Motor #1 (Extend / Retract)
- Button 2 - 12volt Electric Motor #2 (Extend / Retract)
- Button 3 - 12volt Electric Motor #3 (Extend / Retract)
- Button 4 - 12volt Electric Motor #4 (Extend / Retract)
- Buttons 3 & 4 - Porch/Patio Light (On / Off)
- Buttons 1 & 2 - Key Fob Motor Lockout (On / Off)

* NOTE- ALL SWITCH INPUTS MUST BE GROUNDS!

Alta Resources LLC (888) 421-5874 www.altaresourcesllc.com *Patent# 6,900,603*

*There is a 30 & 20 Amp automatic reset breaker inside the box.

The following 5 wires are not used:

- 20 Gauge Red/Black
- Pink
- Brown
- Blue
- Yellow